


ALBUZ
ES LA PRECISIÓN QUE DURA

Ancho de pulverización en función de la altura de barra

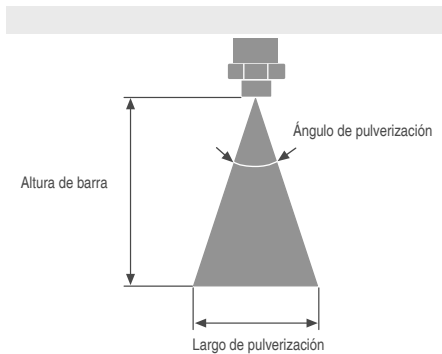

	Sin recubrimiento
	2 recubrimiento
	3 recubrimiento
	4 recubrimiento
	5 recubrimiento

Ancho de pulverización en función de la altura de barra

Ángulo de Pulverización (°)	Altura de pulverización en la planta											
	20	25	30	35	40	45	50	55	60	70	80	90
15°	5	7	8	9	11	12	13	14	16	18	21	24
20°	7	9	11	12	14	16	18	19	21	25	28	32
25°	9	11	13	16	18	20	22	24	27	31	35	40
30°	11	13	16	19	21	24	27	29	32	38	43	48
35°	13	16	19	22	25	28	32	35	38	44	50	57
40°	15	18	22	25	29	33	36	40	44	51	58	66
45°	17	21	25	29	33	37	41	46	50	58	66	75
50°	19	23	28	33	37	42	47	51	56	65	75	84
55°	21	26	31	36	42	47	52	57	62	73	83	94
60°	23	29	35	40	46	52	58	64	69	81	92	104
65°	25	29	38	45	51	57	64	70	76	89	102	115
70°	28	35	42	49	56	63	70	77	84	98	112	126
75°	31	38	46	54	61	69	77	84	92	107	123	138
80°	34	42	50	59	67	76	84	92	101	117	134	151
85°	37	46	55	64	73	82	92	101	110	128	147	165
90°	40	50	60	70	80	90	100	110	120	140	160	180
95°	44	55	65	76	87	98	109	120	131	153	175	196
100°	48	60	72	83	95	107	119	131	143	167	191	215
110°	57	71	86	100	114	129	143	157	171	200	229	
120°	69	87	104	121	139	156	173	191	208	242		
130°	86	107	129	150	172	193	214	236				
140°	110	137	165	192	220	247						
150°	149	187	224									
160°	227											

